

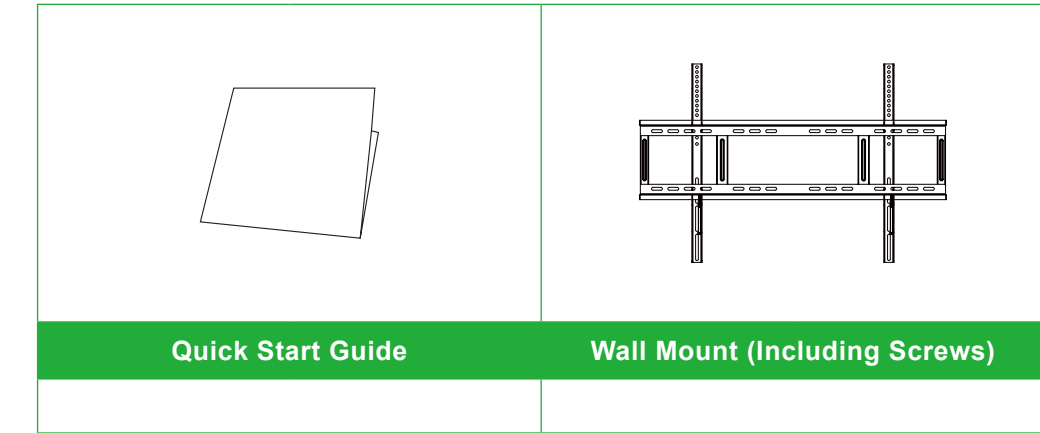
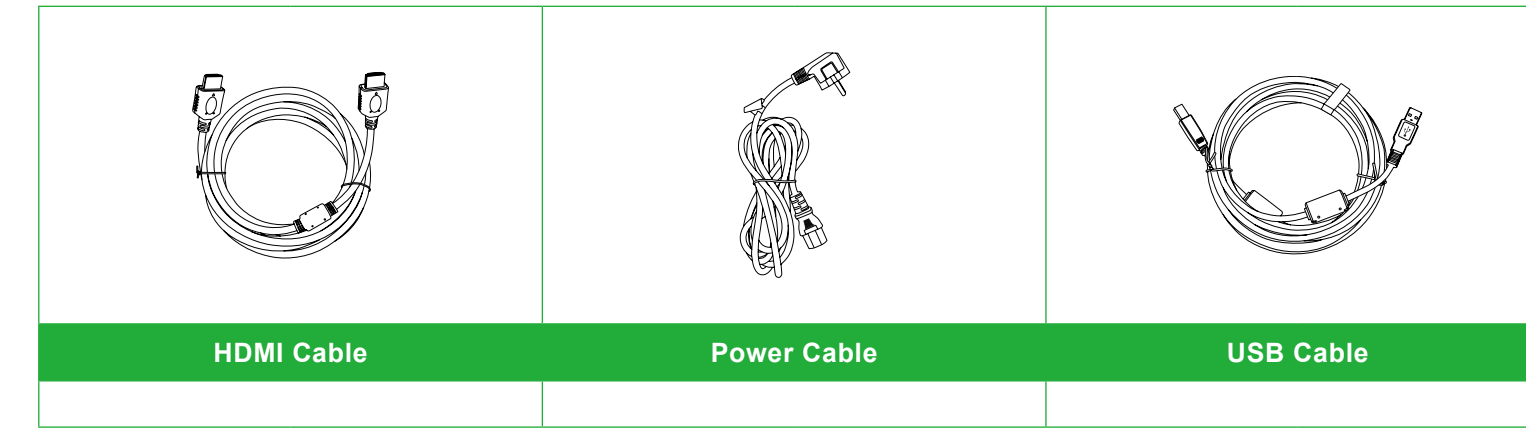


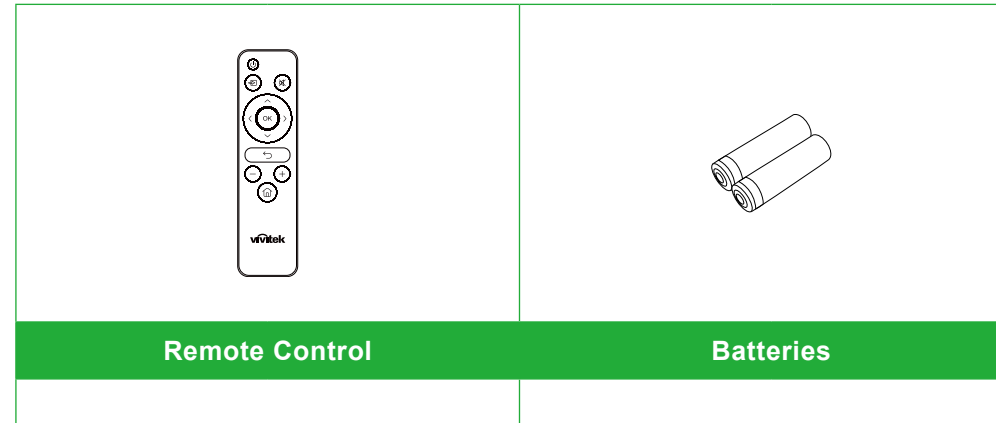


**NovoTouch**  
BK Series

**Package Contents**

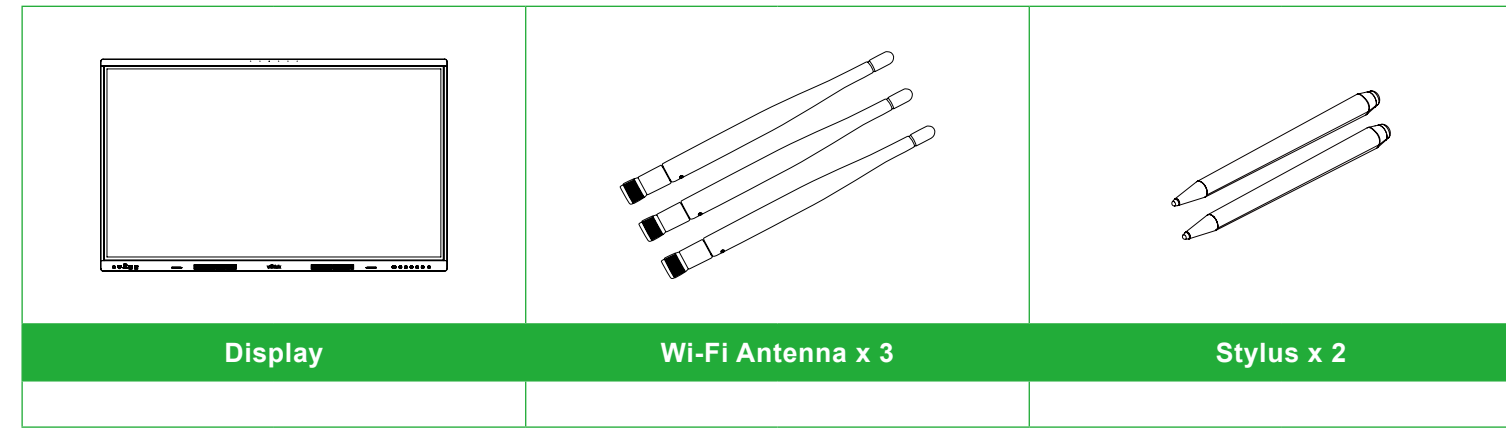


**Display Overview (Front)**

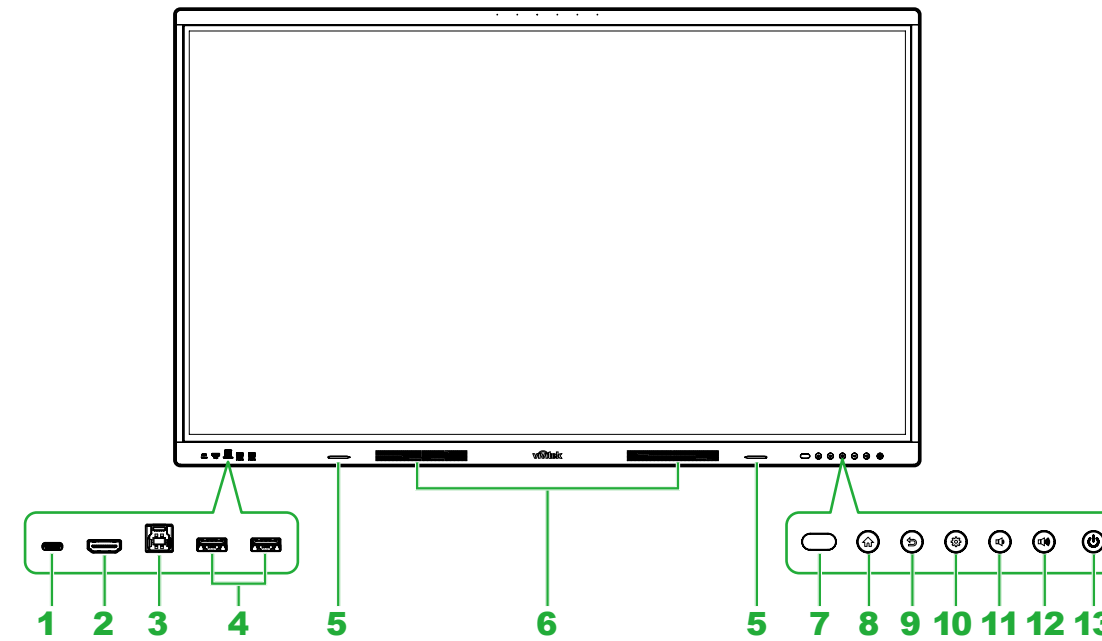

- |                           |                                  |                       |
|---------------------------|----------------------------------|-----------------------|
| 1 USB-C Port              | 6 Speakers                       | 11 Volume Down Button |
| 2 HDMI Port               | 7 IR Sensor (for Remote Control) | 12 Volume Up Button   |
| 3 Touch (USB-B) Port      | 8 Home Button                    | 13 Power Button       |
| 4 USB-A 3.0 Ports x 2     | 9 Back Button                    |                       |
| 5 Magnetic Stylus Holders | 10 Settings Button               |                       |

**Display Overview (Rear)**

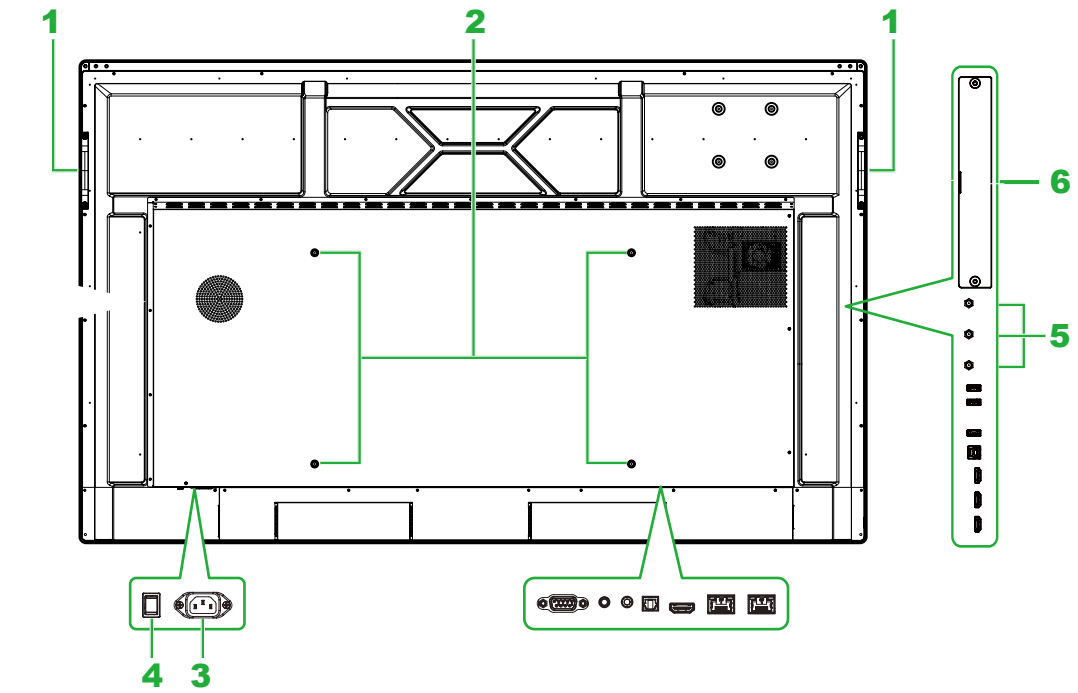


- |                          |                            |
|--------------------------|----------------------------|
| 1 Handles                | 4 Power Switch             |
| 2 Wall Mount Screw Holes | 5 Wi-Fi Antenna Connectors |
| 3 Power Socket           | 6 80-Pin OPS Slot          |




## Ports and Connectors

Left


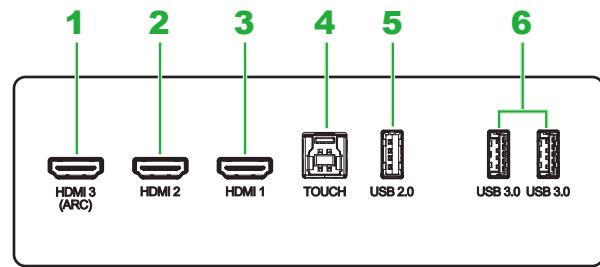


Bottom

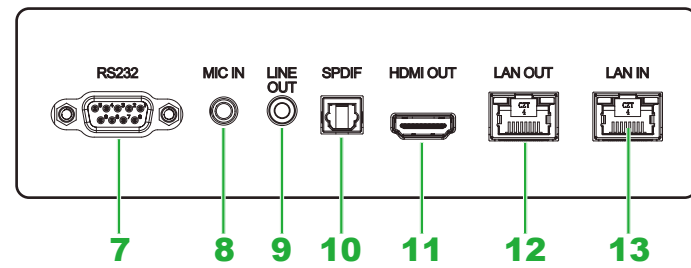


- |                             |                      |                  |
|-----------------------------|----------------------|------------------|
| 1 HDMI In Port 3 (with ARC) | 6 USB 3.0 Ports x 2  | 11 HDMI Out Port |
| 2 HDMI In Port 2            | 7 RS-232 In Port     | 12 LAN Out Port  |
| 3 HDMI In Port 1            | 8 Microphone In Jack | 13 LAN In Port   |
| 4 Touch (USB-B) Port        | 9 Line Out Jack      |                  |
| 5 USB 2.0 Port              | 10 SPDIF Port        |                  |

## Connections

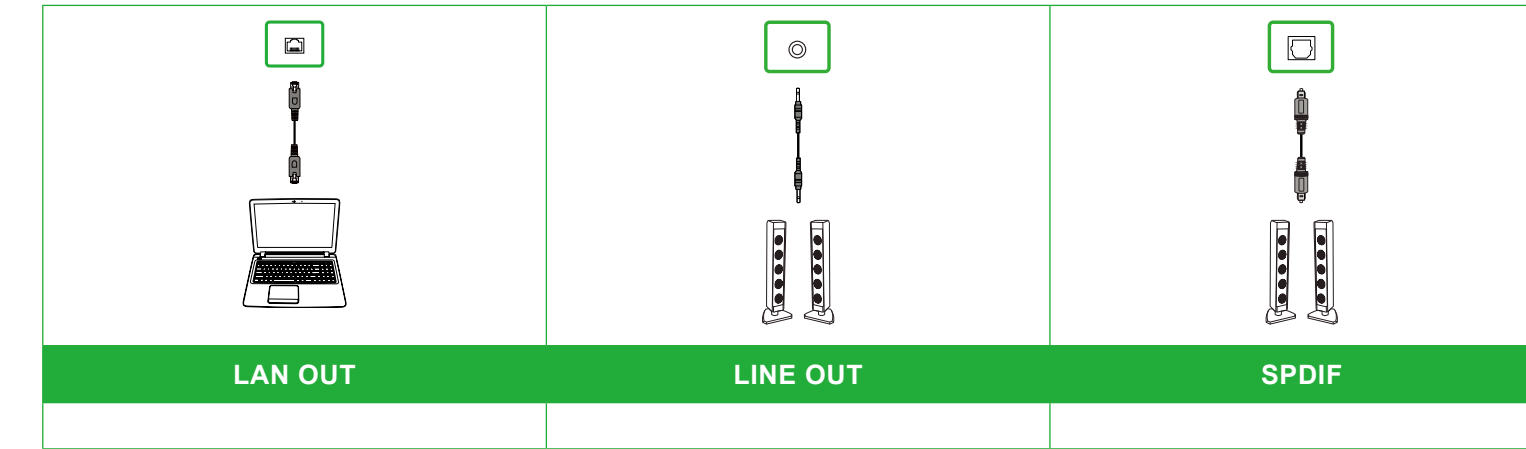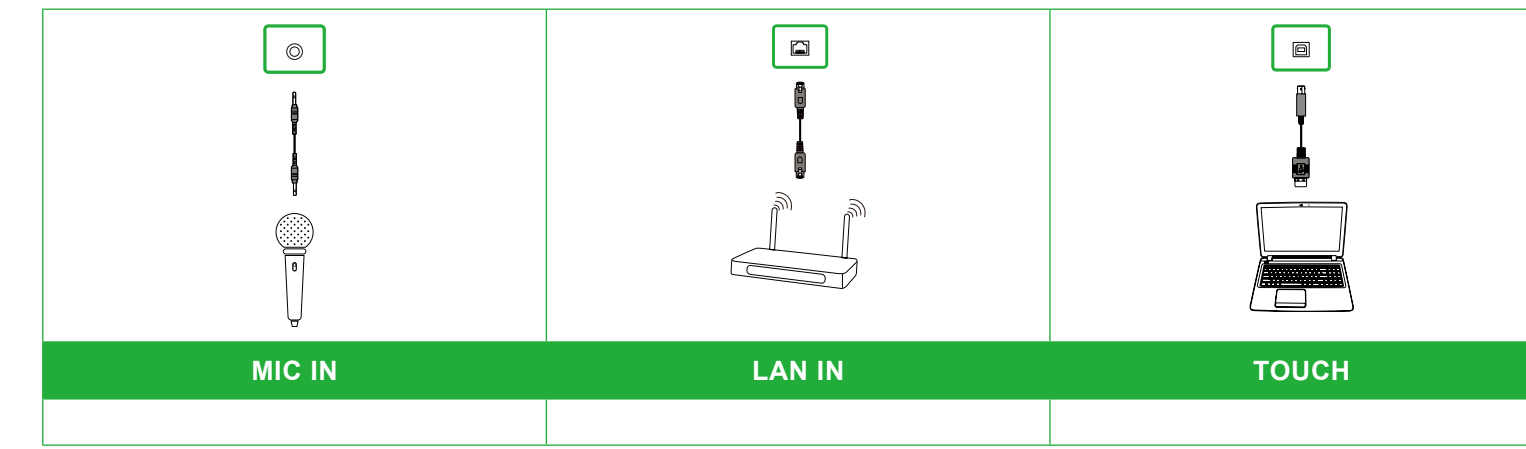


## Remote Control

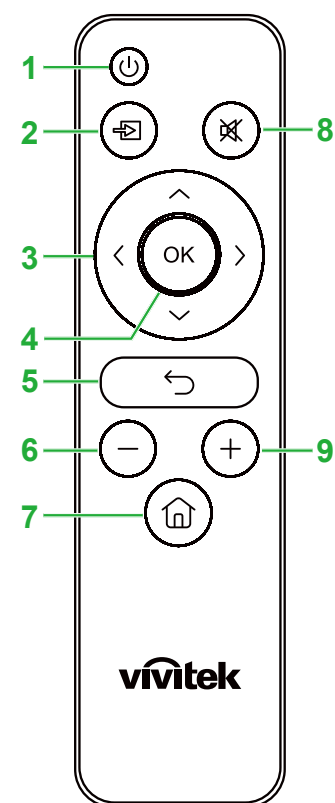


- |                      |
|----------------------|
| 1 Power              |
| 2 Input Source       |
| 3 Navigation Buttons |
| 4 OK                 |
| 5 Back               |
| 6 Volume Down        |
| 7 Home               |
| 8 Mute               |
| 9 Volume Up          |

## Getting Started


Insert the Wi-Fi antennas onto the connectors, rotate them clockwise, and then turn the antennas inwards.

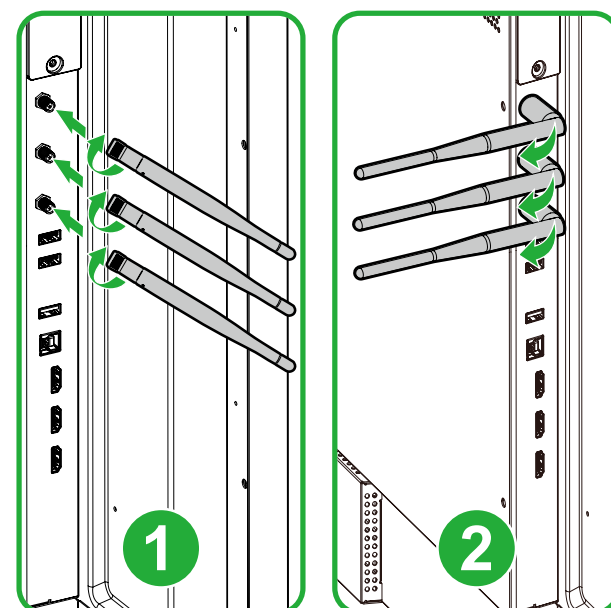

Plug the power cable into the display and a power source, turn the power switch on, and then press the power button.

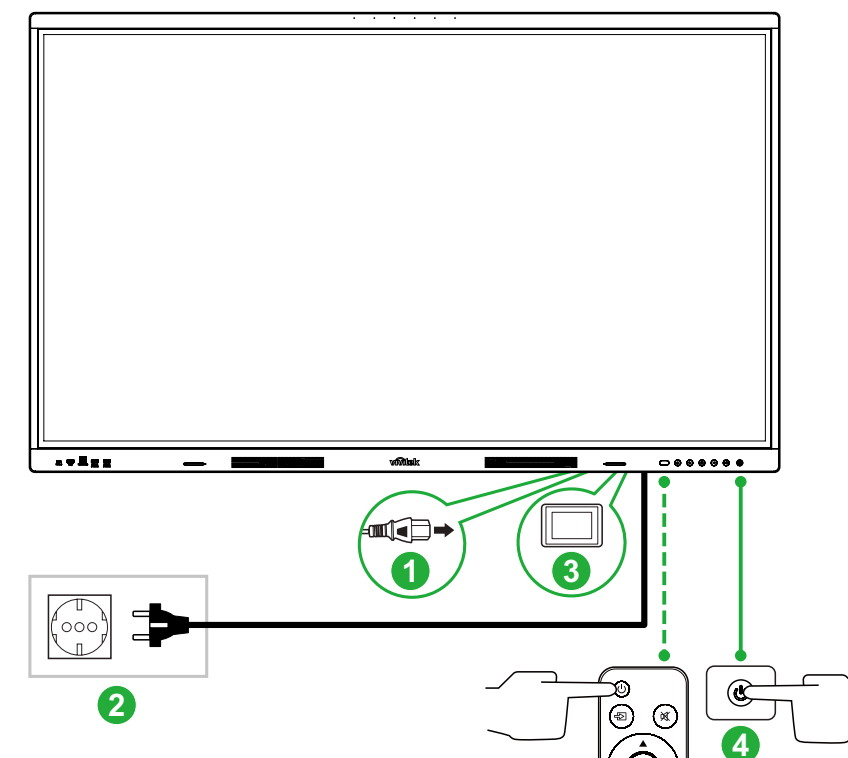

## Home Screen

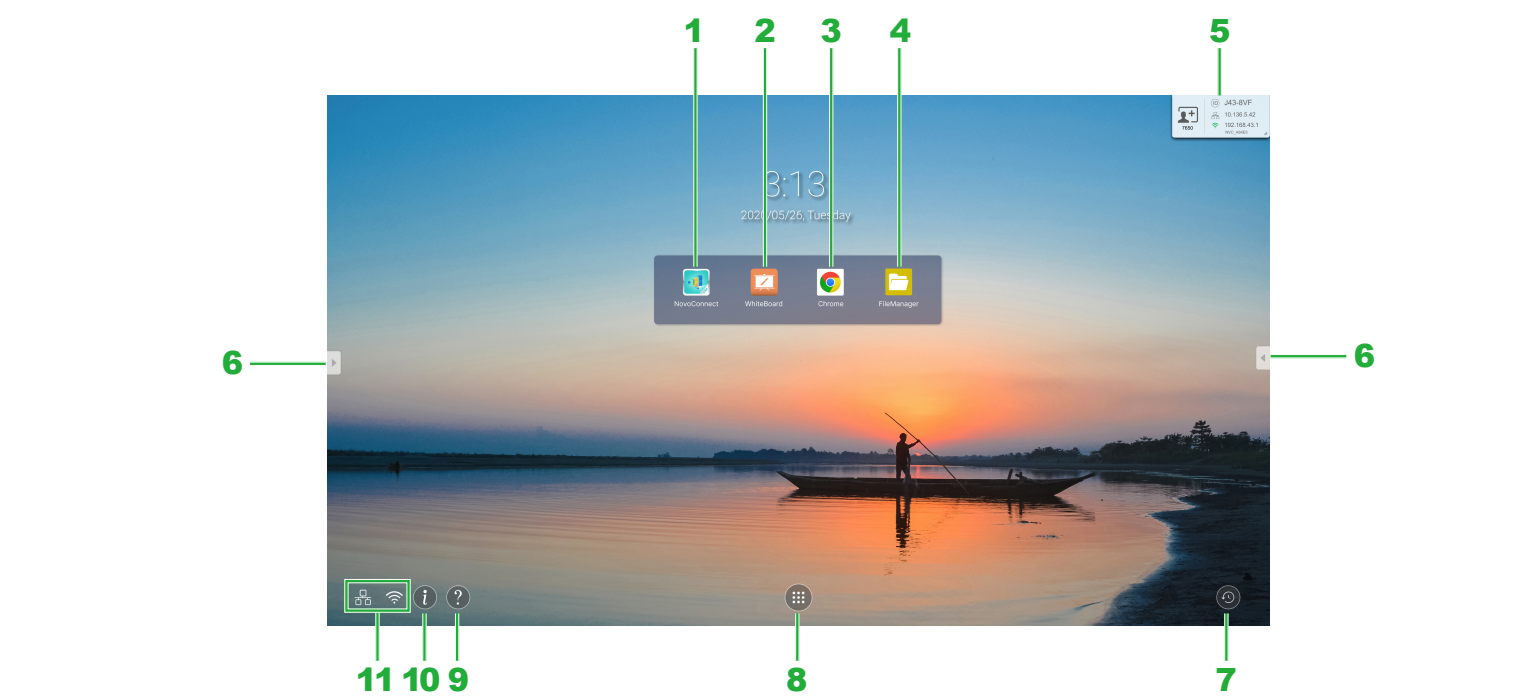

- |                          |                       |   |
|--------------------------|-----------------------|---|
| 1 NovoConnect App        | 5 Session Information | 9 Online Support                        |
| 2 Whiteboard Drawing App | 6 Side Bar Menu       | 10 Session Information (Enable/Disable) |
| 3 Web Browser            | 7 Clear History       | 11 Network Status                       |
| 4 File Management App    | 8 All Apps            |   |